


This product was developed for the Canopus Hybrid Drum Throne, but it can be attached to products of similar size.

If you apply too much force when attaching it to a product of a different size, the end of the rubber strap may come off the coupler.

In such a case, it can be repaired by following the procedure here.

## In the event that the rubber strap becomes detached from the coupler


- 1** Pulling too hard may cause the elastic cord to come loose.

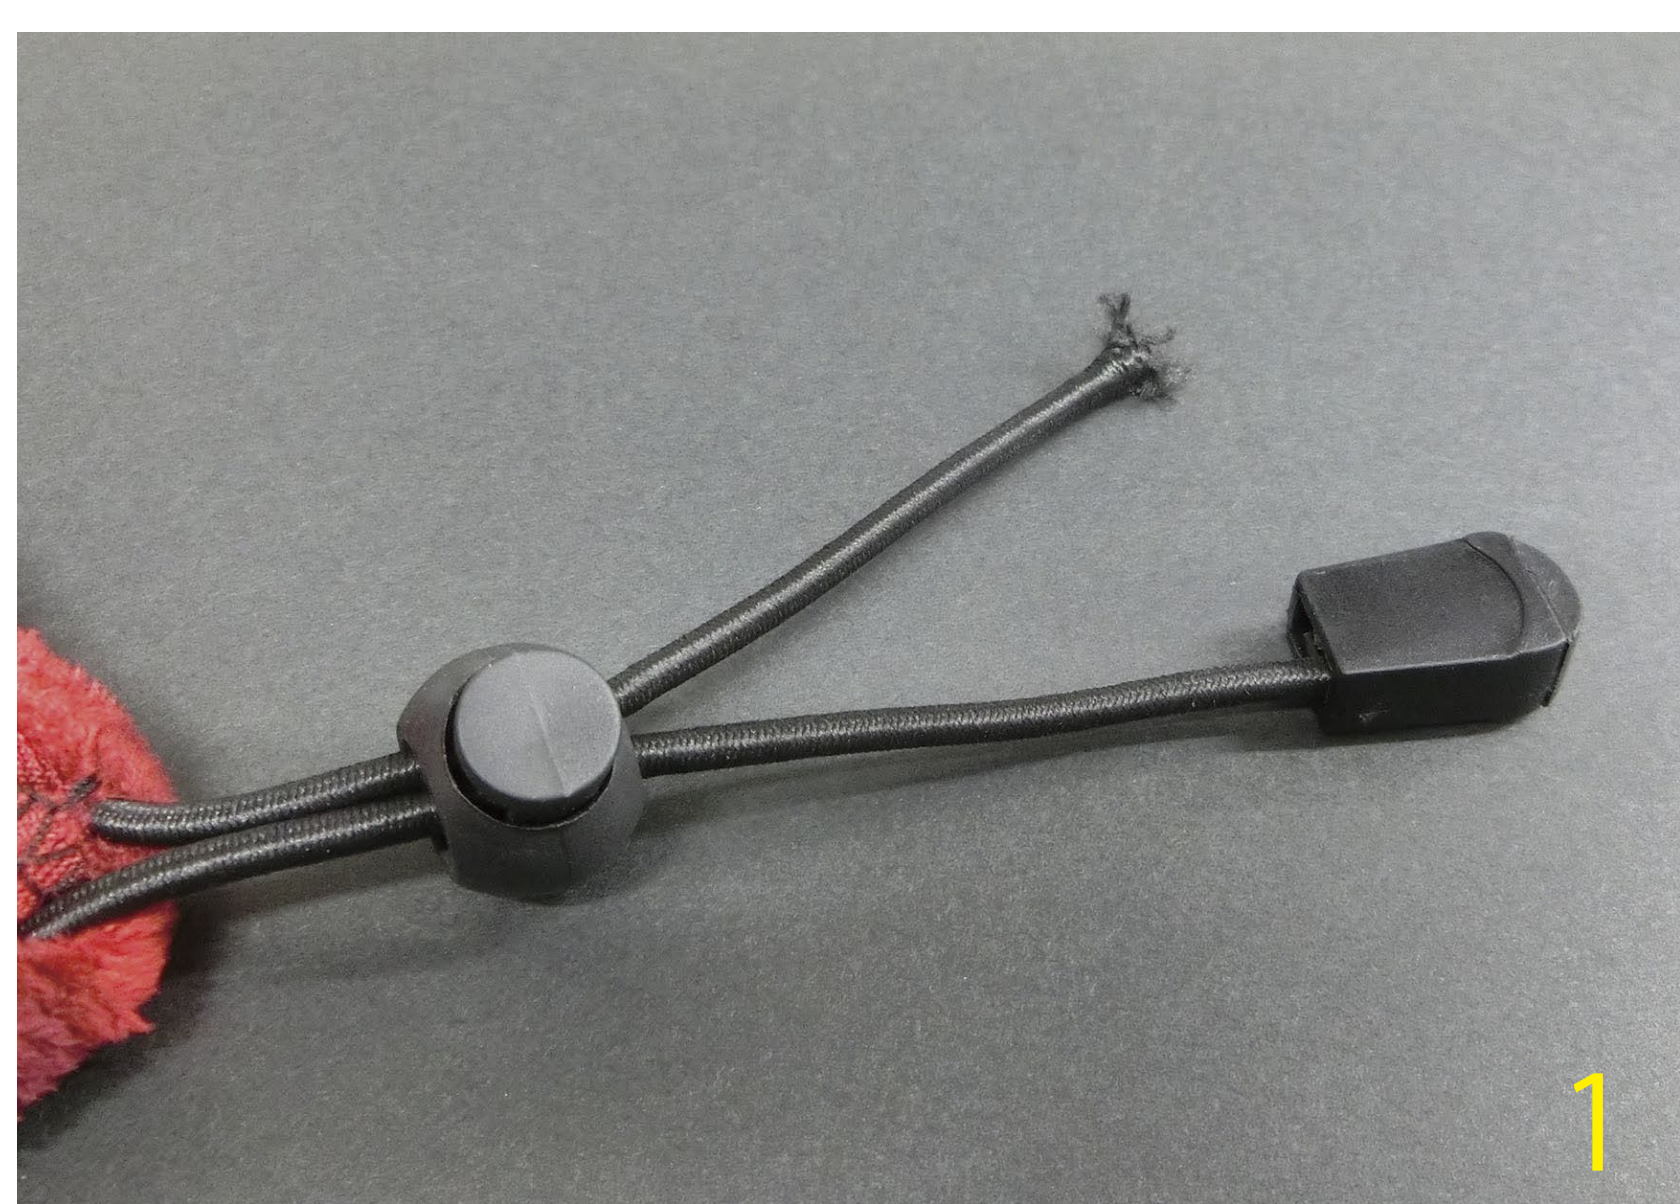


- 2** If it comes off or you want to replace the rubber strap, use a flathead screwdriver or similar tool to remove the semicircular gap.




- 3** It is in a cap shape.

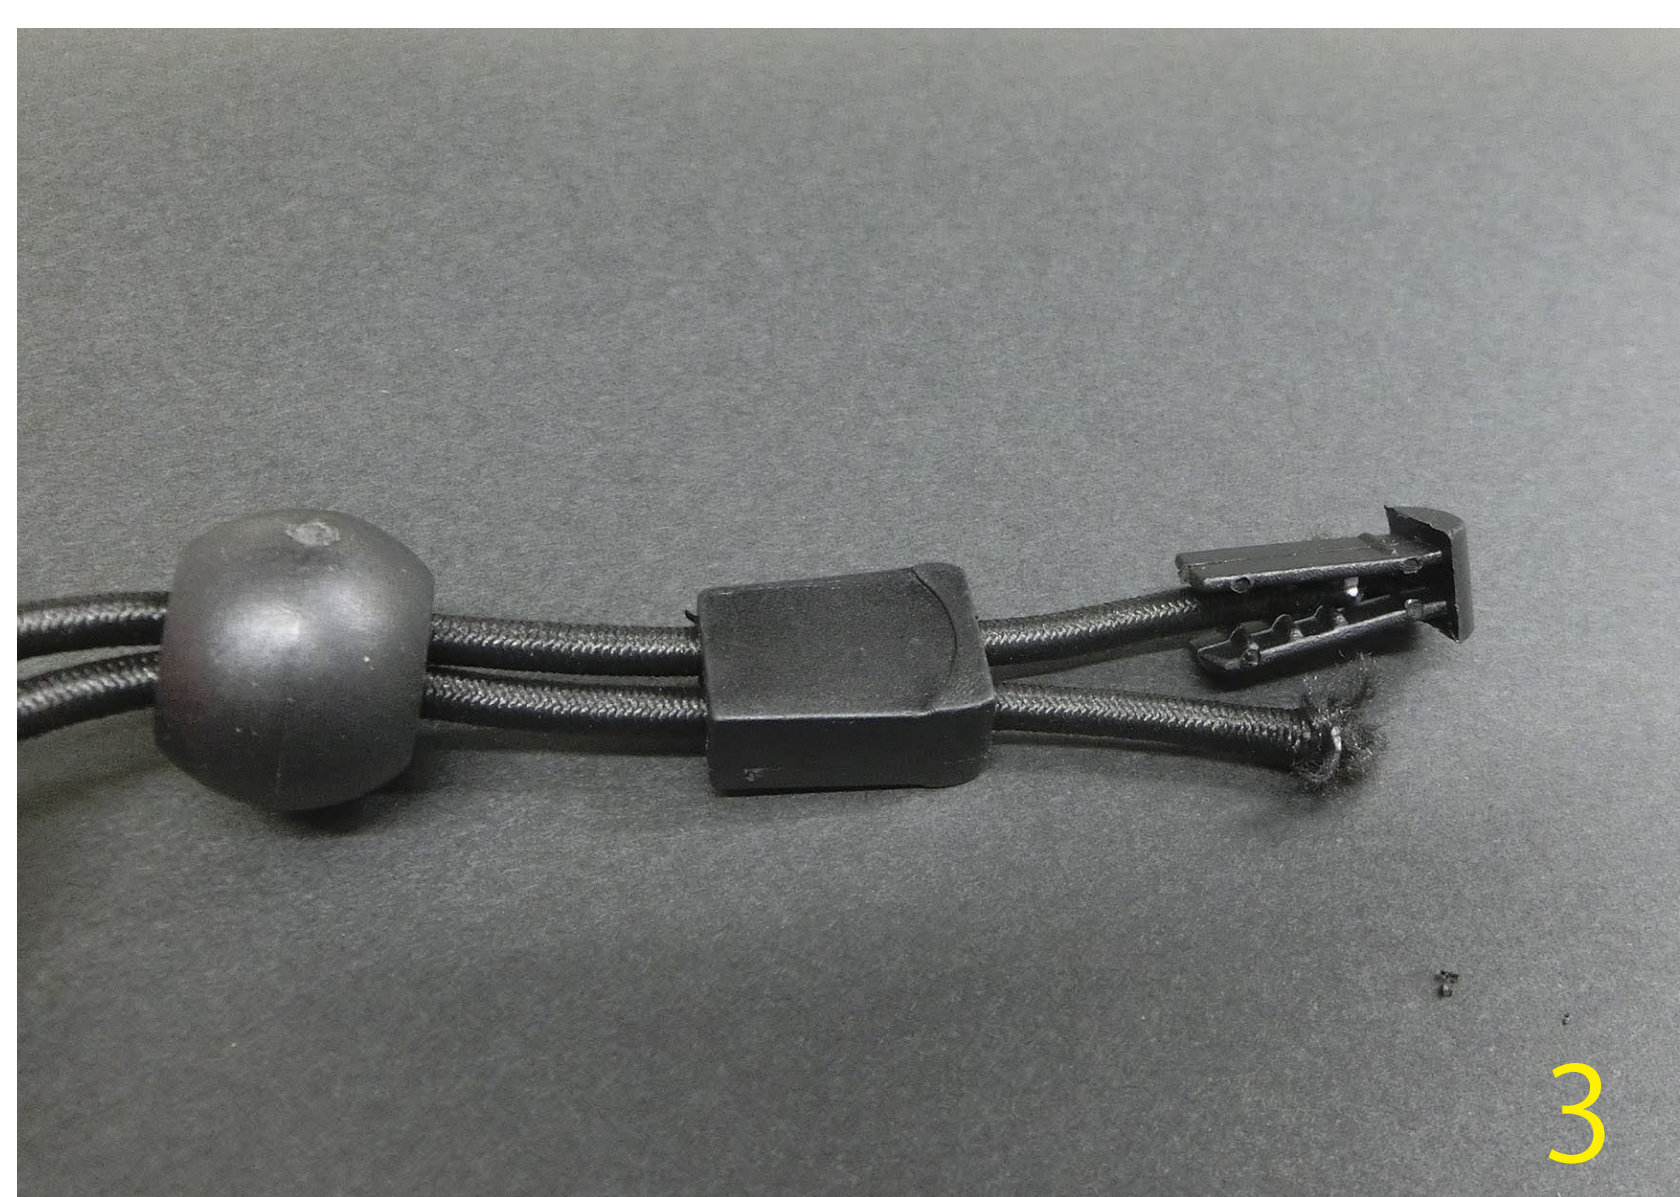

- 4** Put both cords in the clip.

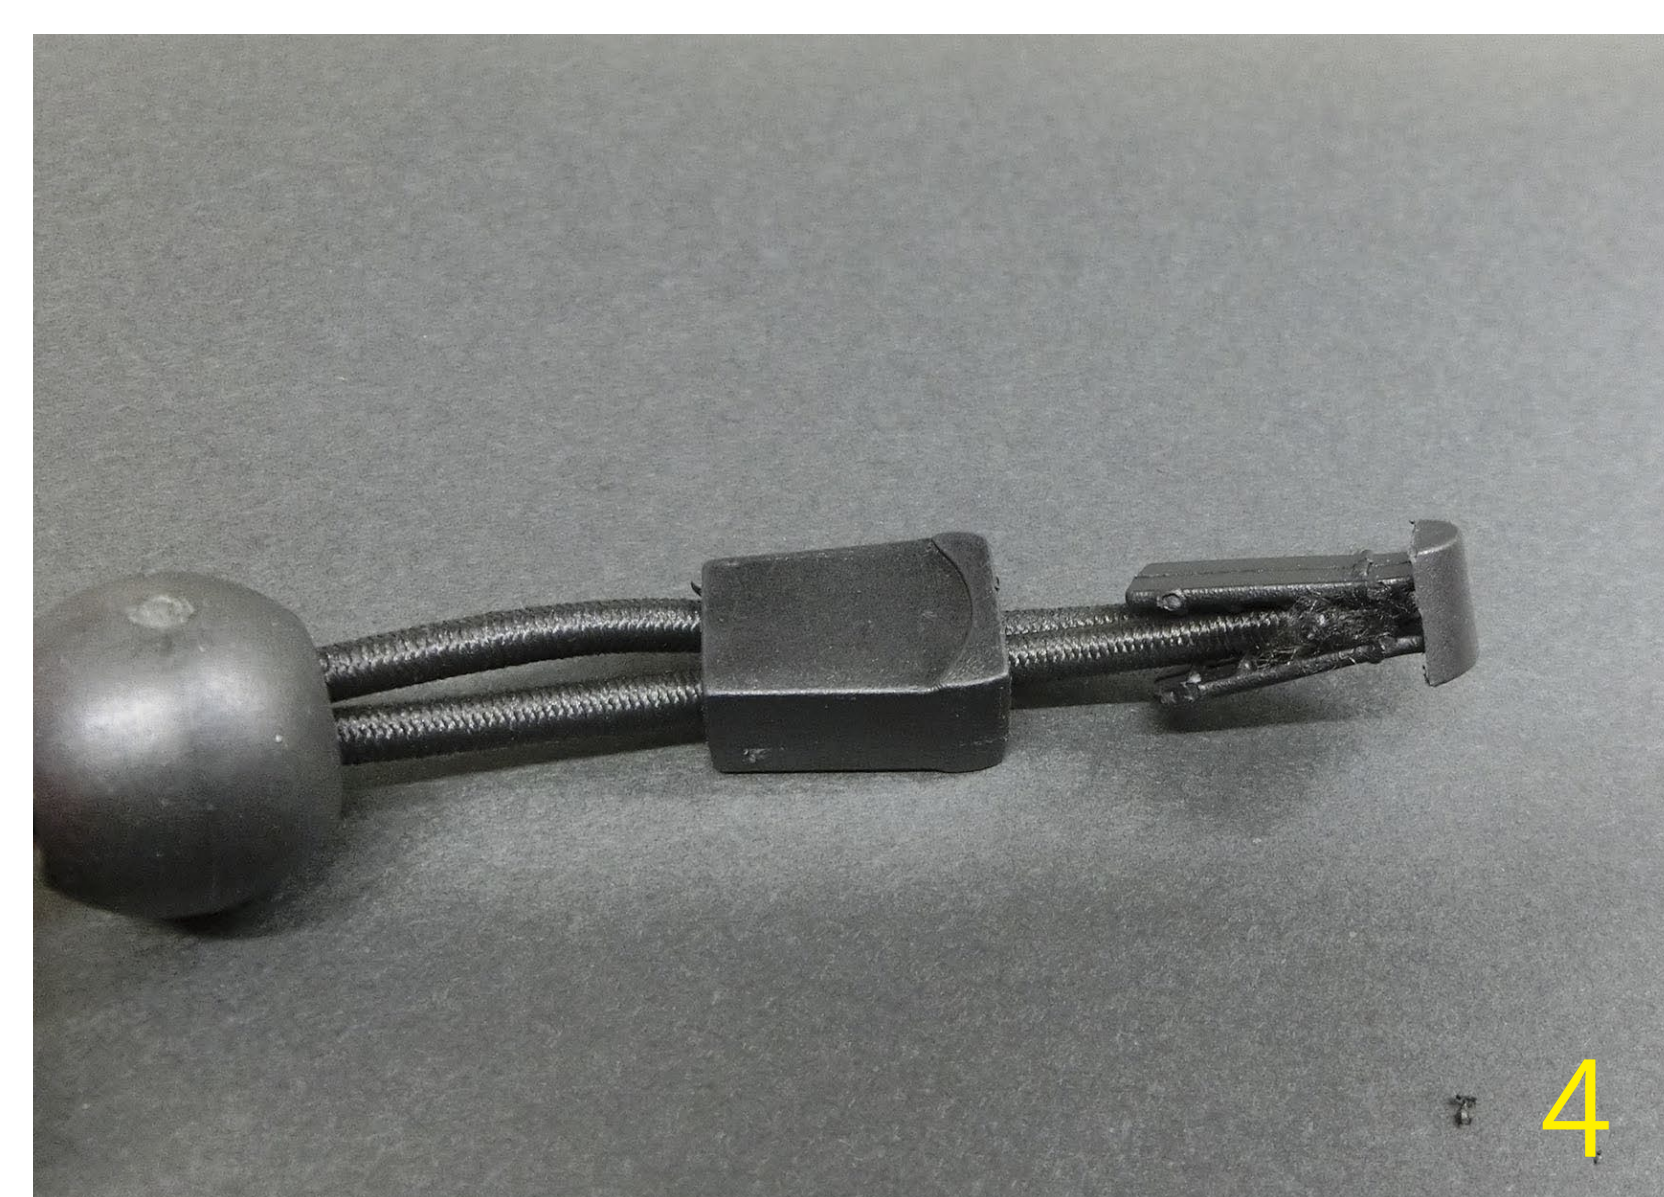

- 5** Push the clip in.

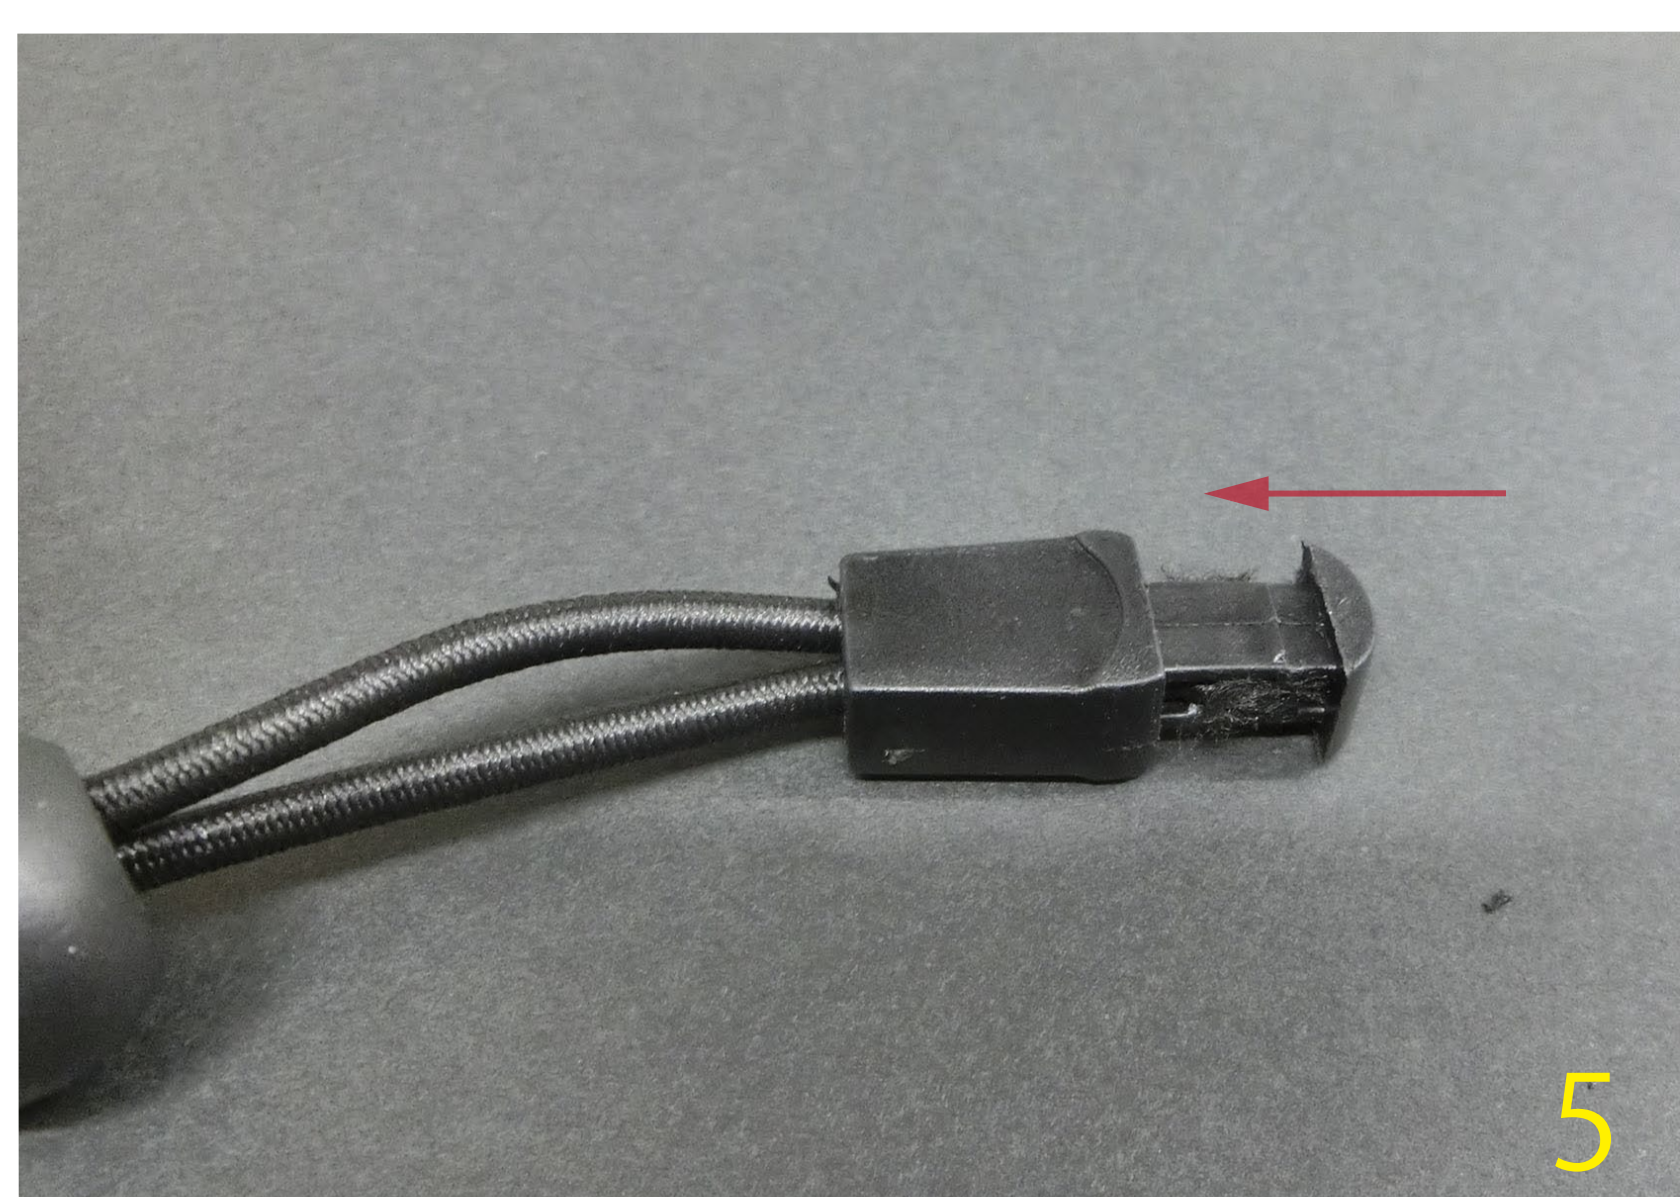

- 6** Done.

